


Montgomery County P-25 Simulcast Radio System

A Brief Overview of the
System and Equipment


Montgomery County Simulcast

- Simulcast – Simultaneous Broadcast
- All towers use the same frequencies
- All tower locations work as one
 - All tower transmit at the same time
 - All towers receive at the same time
- Provides better portable in building coverage

Montgomery County Simulcast

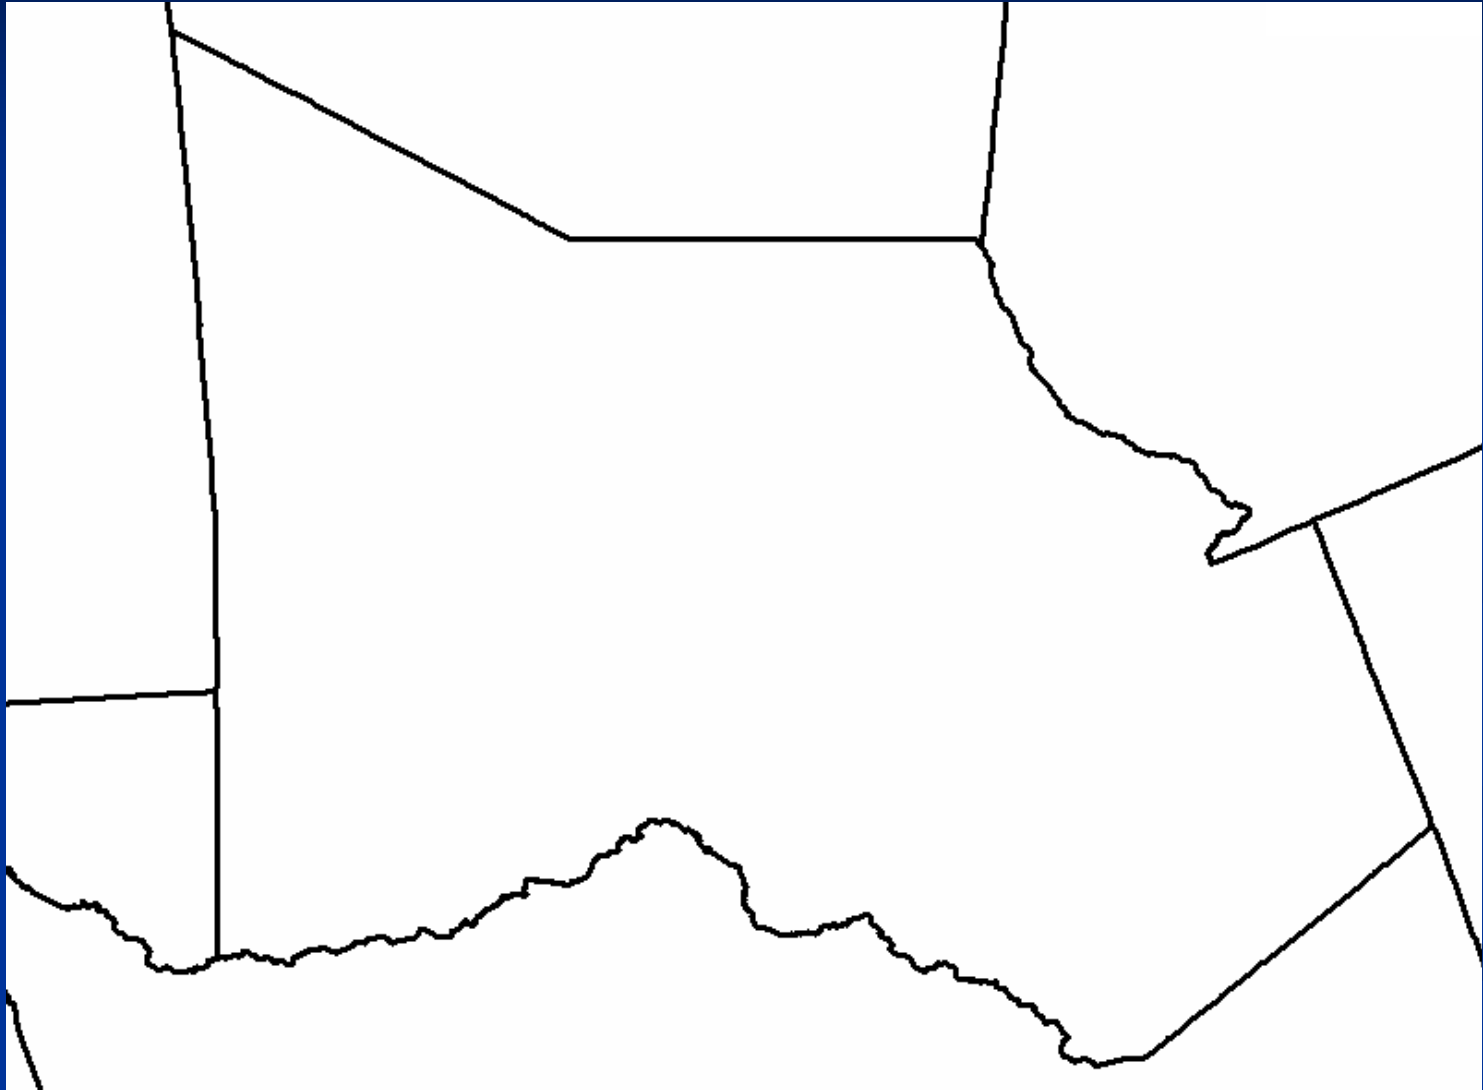


Montgomery County Simulcast

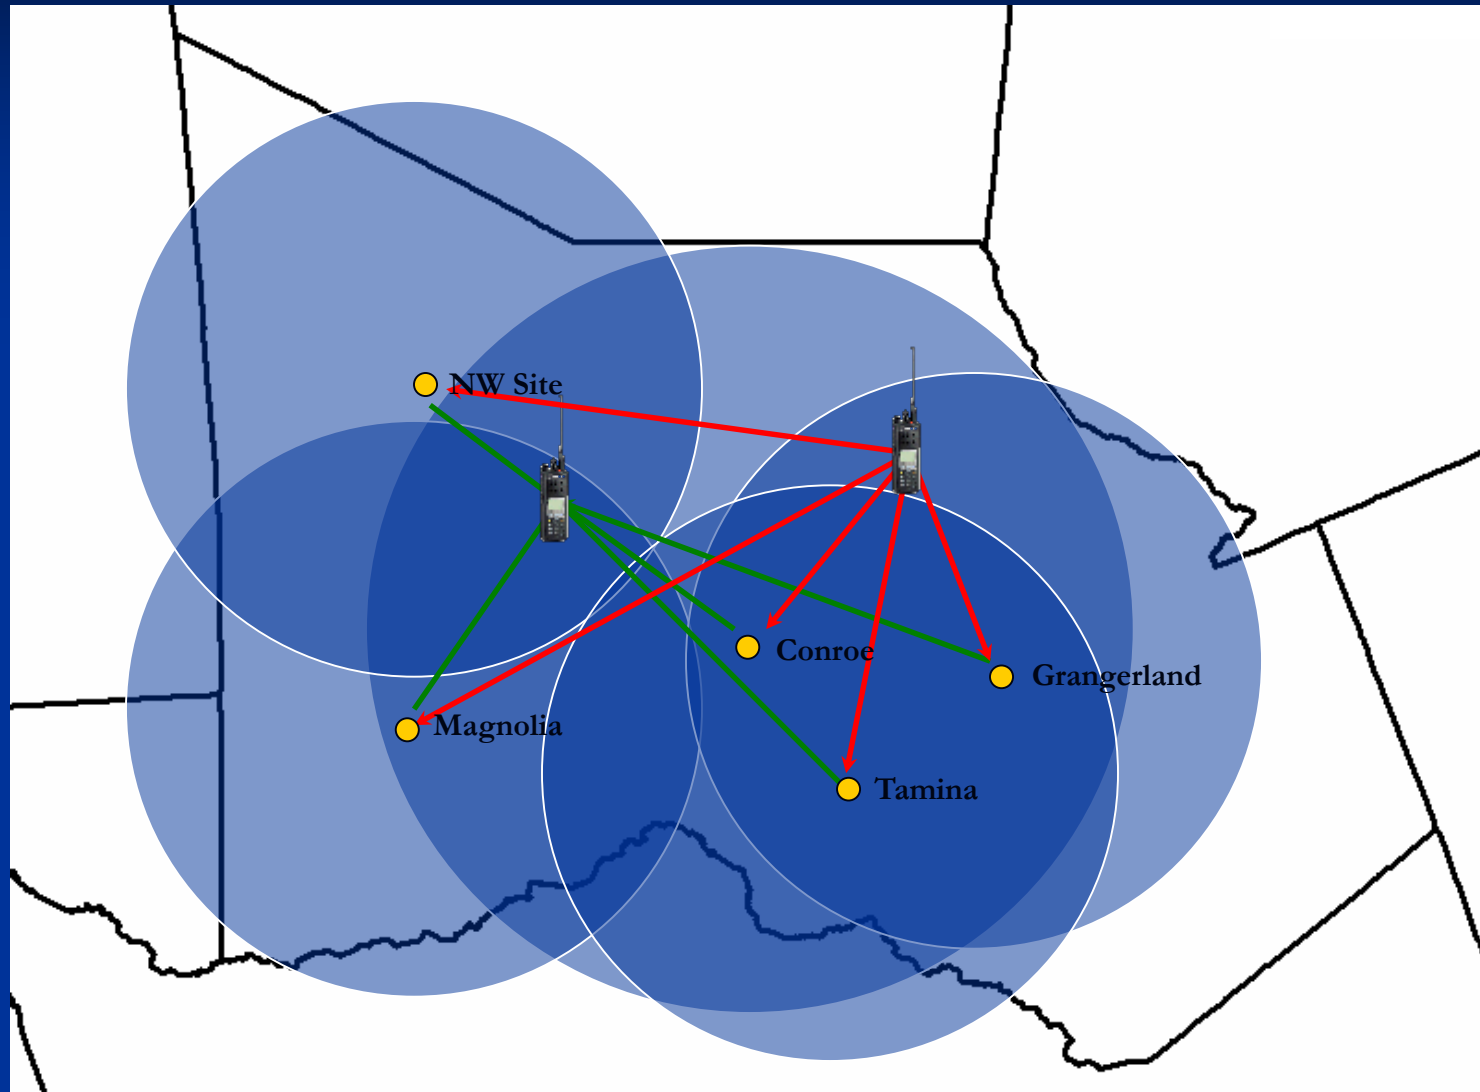

Montgomery County Simulcast



XTS 5000 Radios

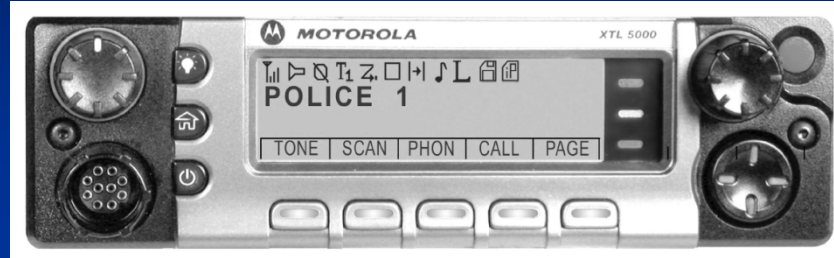

XTL 5000 Mobile




XTL 2500 Mobile



XTS 2500 Radios

Montgomery County Simulcast

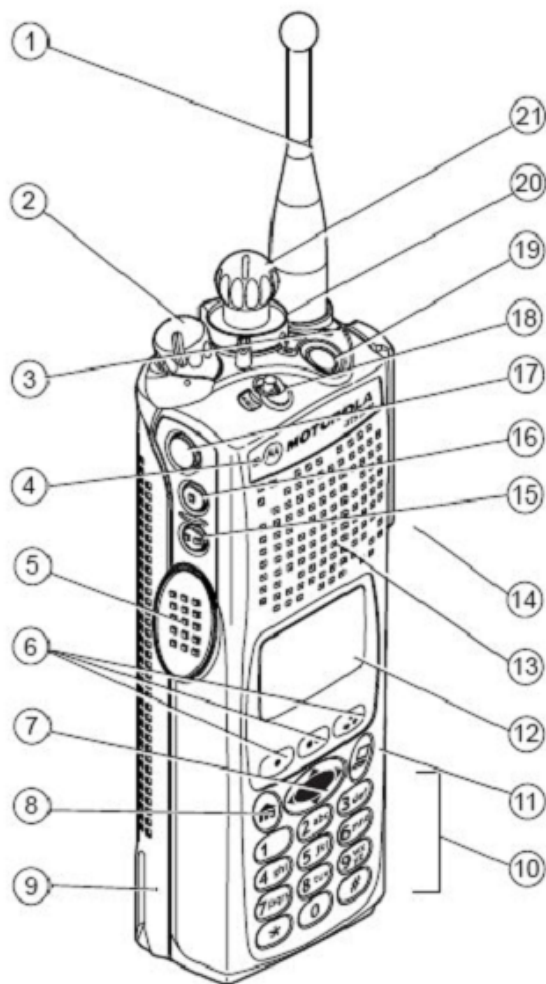


XTS 5000 Model III Radio

- 1 Antenna
- 2 On / Off and Volume Control
- 3 Transmit Indicator / Low Battery LED
- 4 Microphone
- 5 Push-To-Talk (PTT)
- 6 Menu Select Buttons
- 7 Navigation Button
- 8 Home Button
- 9 Battery
- 10 Keypad
- 11 N/A
- 12 Display
- 13 Speaker
- 14 Accessory Connector
- 15 Key Lock
- 16 Volume Set Tone
- 17 Scan
- 18 Zone Select
- 19 Emergency Button
- 20 N/A
- 21 Channel Select




XTS 5000 Model II Radio

Montgomery County Simulcast

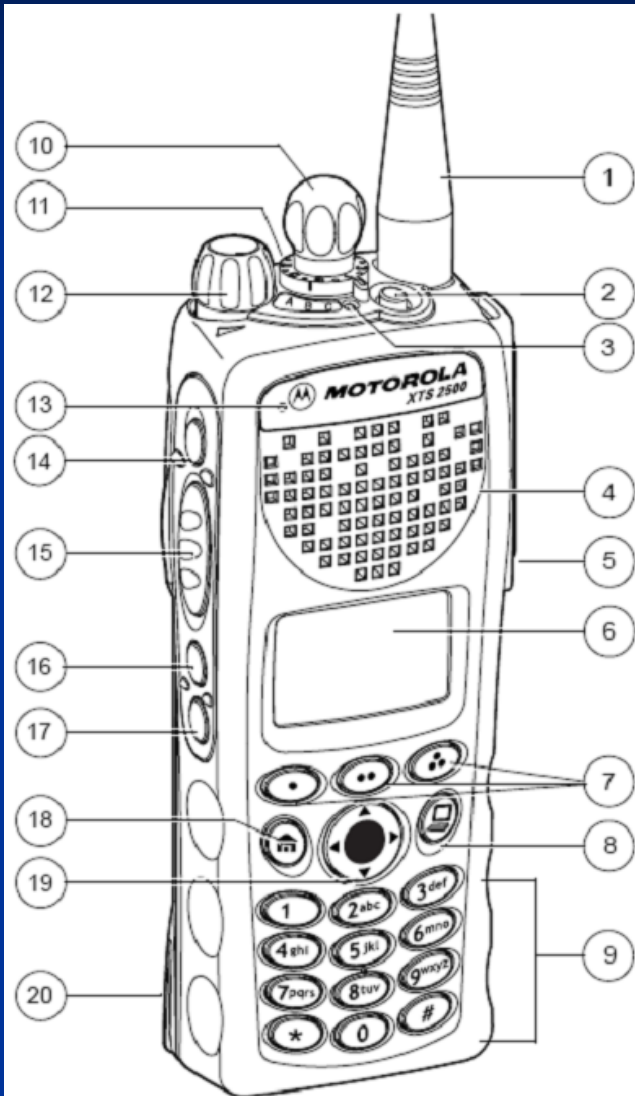

XTS 2500 Model III Radio

- 1 Antenna
- 2 Emergency Button
- 3 Transmit Indicator / Low Battery LED
- 4 Speaker
- 5 Accessory Connector
- 6 Display
- 7 Menu Select Buttons
- 8 N/A
- 9 Keypad
- 10 Channel Select
- 11 Zone Select
- 12 On / Off and Volume Control
- 13 Microphone
- 14 Scan
- 15 Push-To-Talk (PTT)
- 16 Volume Set Tone
- 17 Key Lock
- 18 Home Button
- 19 Navigation Button
- 20 Battery

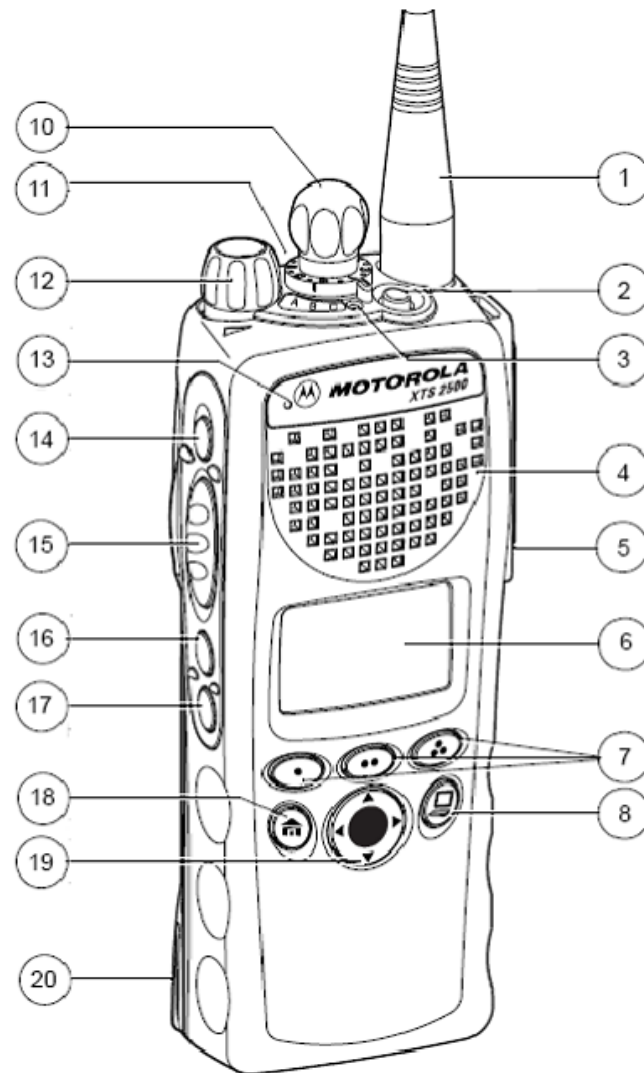

XTS 2500 Model II Radio

Montgomery County Simulcast

Zone V				Zone W				Zone X				Zone Y			
1	V	-	LAW MA 1	1	W	-	FM-1	1	X	-	PUB - HLTH	1	Y	-	NW MA 1
2	V	-	LAW MA 2	2	W	-	HC HAZMAT	2	X	-	CMOC CMD	2	Y	-	NW MA 2
3	V	-	LAW MA 3	3	W	-	HPD FOX	3	X	-	CMOC 1	3	Y	-	NE MA 1
4	V	-	LAW MA 4	4	W	-	7 CALL 50	4	X	-	CMOC 2	4	Y	-	NE MA 2
5	V	-	LAW MA 5	5	W	-	7 TAC 51	5	X	-	CMOC 3	5	Y	-	SW MA1
6	V	-	HC PRST 1	6	W	-	7 TAC 52	6	X	-	CMOC 4	6	Y	-	SW MA 2
7	V	-	HC PRST 2	7	W	-	7 TAC 53	7	X	-	CMOC 5	7	Y	-	SE MA 1
8	V	-	AIR 1	8	W	-	7 TAC 54	8	X	-	CMOC 6	8	Y	-	SE MA 2
9	V	-	AIR 2	9	W	-	8 CALL 90	9	X	-	AIR 1	9	Y	-	CE MA 1
10	V	-	HPD 1	10	W	-	8 TAC 91	10	X	-	AIR 2	10	Y	-	CE MA 2
11	V	-	HPD FOX	11	W	-	8 TAC 92	11	X	-	EMS MA	11	Y	-	AIR 1
12	V	-	DISP MA	12	W	-	8 TAC 93	12	X	-		12	Y	-	AIR 2
13	V	-	NWS HGX	13	W	-	8 TAC 94	13	X	-		13	Y	-	FIRE MA
14	V	-	HAMM	14	W	-	TX LAW MA	14	X	-		14	Y	-	EMS MA
15	V	-	ISD MA	15	W	-	TX FIRE MA	15	X	-		15	Y	-	DISP MA
16	V	-	PW MA	16	W	-	TX EMS MA	16	X	-		16	Y	-	LAW MA

State and Regional
Interoperability Channels

Montgomery County Simulcast

 
Secure Operation

On – Secure Operation

Off – Clear Operation

Radio is Data
Capable

View/Program Mode



Steady – View Mode

Flashing – Program mode

Radio Time

Signal Strength Indicator

Current Selected/Active TG


ID of current transmitting unit

Battery Life Indicator

Soft Key Menu Options

Soft Keys

Home Key – Changes
selected channel to
home channel (A-1)

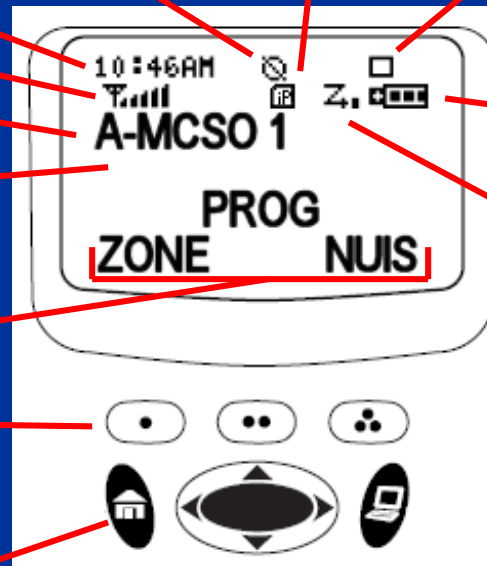


Scan Indicator



Normal scanning



 Priority One Scan




Priority two Scan

Montgomery County Simulcast


Menu Item	Description
ZONE	Allows you the ability to change zones past the first three (3) zones
PROG	Allows you the ability to change the scan list within the radio
NUIS	Temporarily remove a busy talkgroup from your scan list
CLCK	Change the time and Date on the Radio
VIEW	Allows the ability to view your scan list and how it is programmed
BATT	Provides vital signs and information about your battery
CALL	Used to allow the end user to view his/her Radio ID (Press Call and then left button once)
MUTE	Used to mute radio button tones (PTT & Emergency still come through)

Montgomery County Simulcast

XTL 5000 Mobile

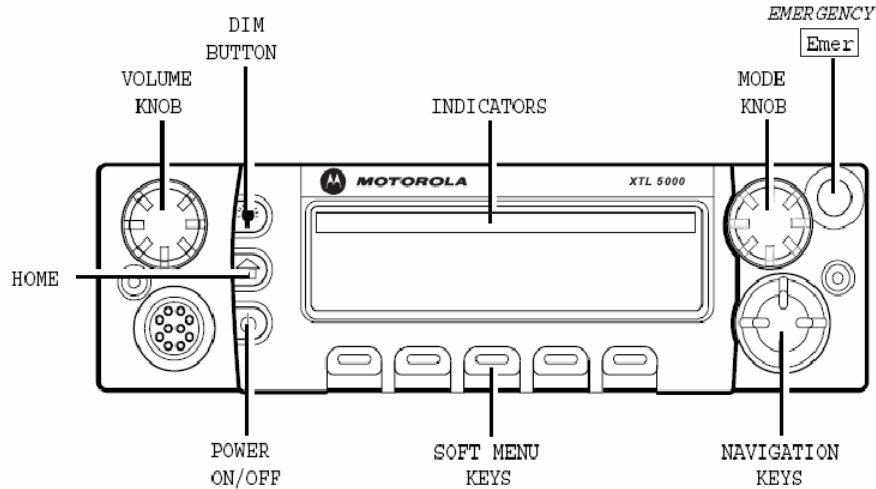

XTL 2500 Mobile

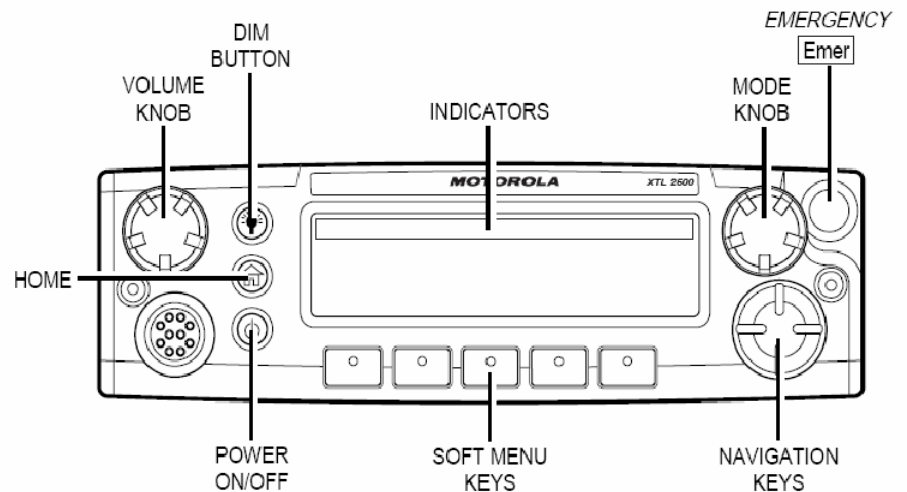

Montgomery County Simulcast

Menu Item	Description
ZNUP	Allows you the ability to change zones
ZNDN	Allows you the ability to change zones
SCAN	Allows you the ability to turn scan on or off
PROG	Allows you the ability to change the scan list within the radio
NUIS	Temporarily remove a busy talkgroup from your scan list
VIEW	Allows the ability to view your scan list and how it is programmed
CALL	Used to allow the end user to view his/her Radio ID (Press Call and then left button once)
COLR	Used to change the background color of the display