


REMOTE CONTROL FOR ANDROID BOX

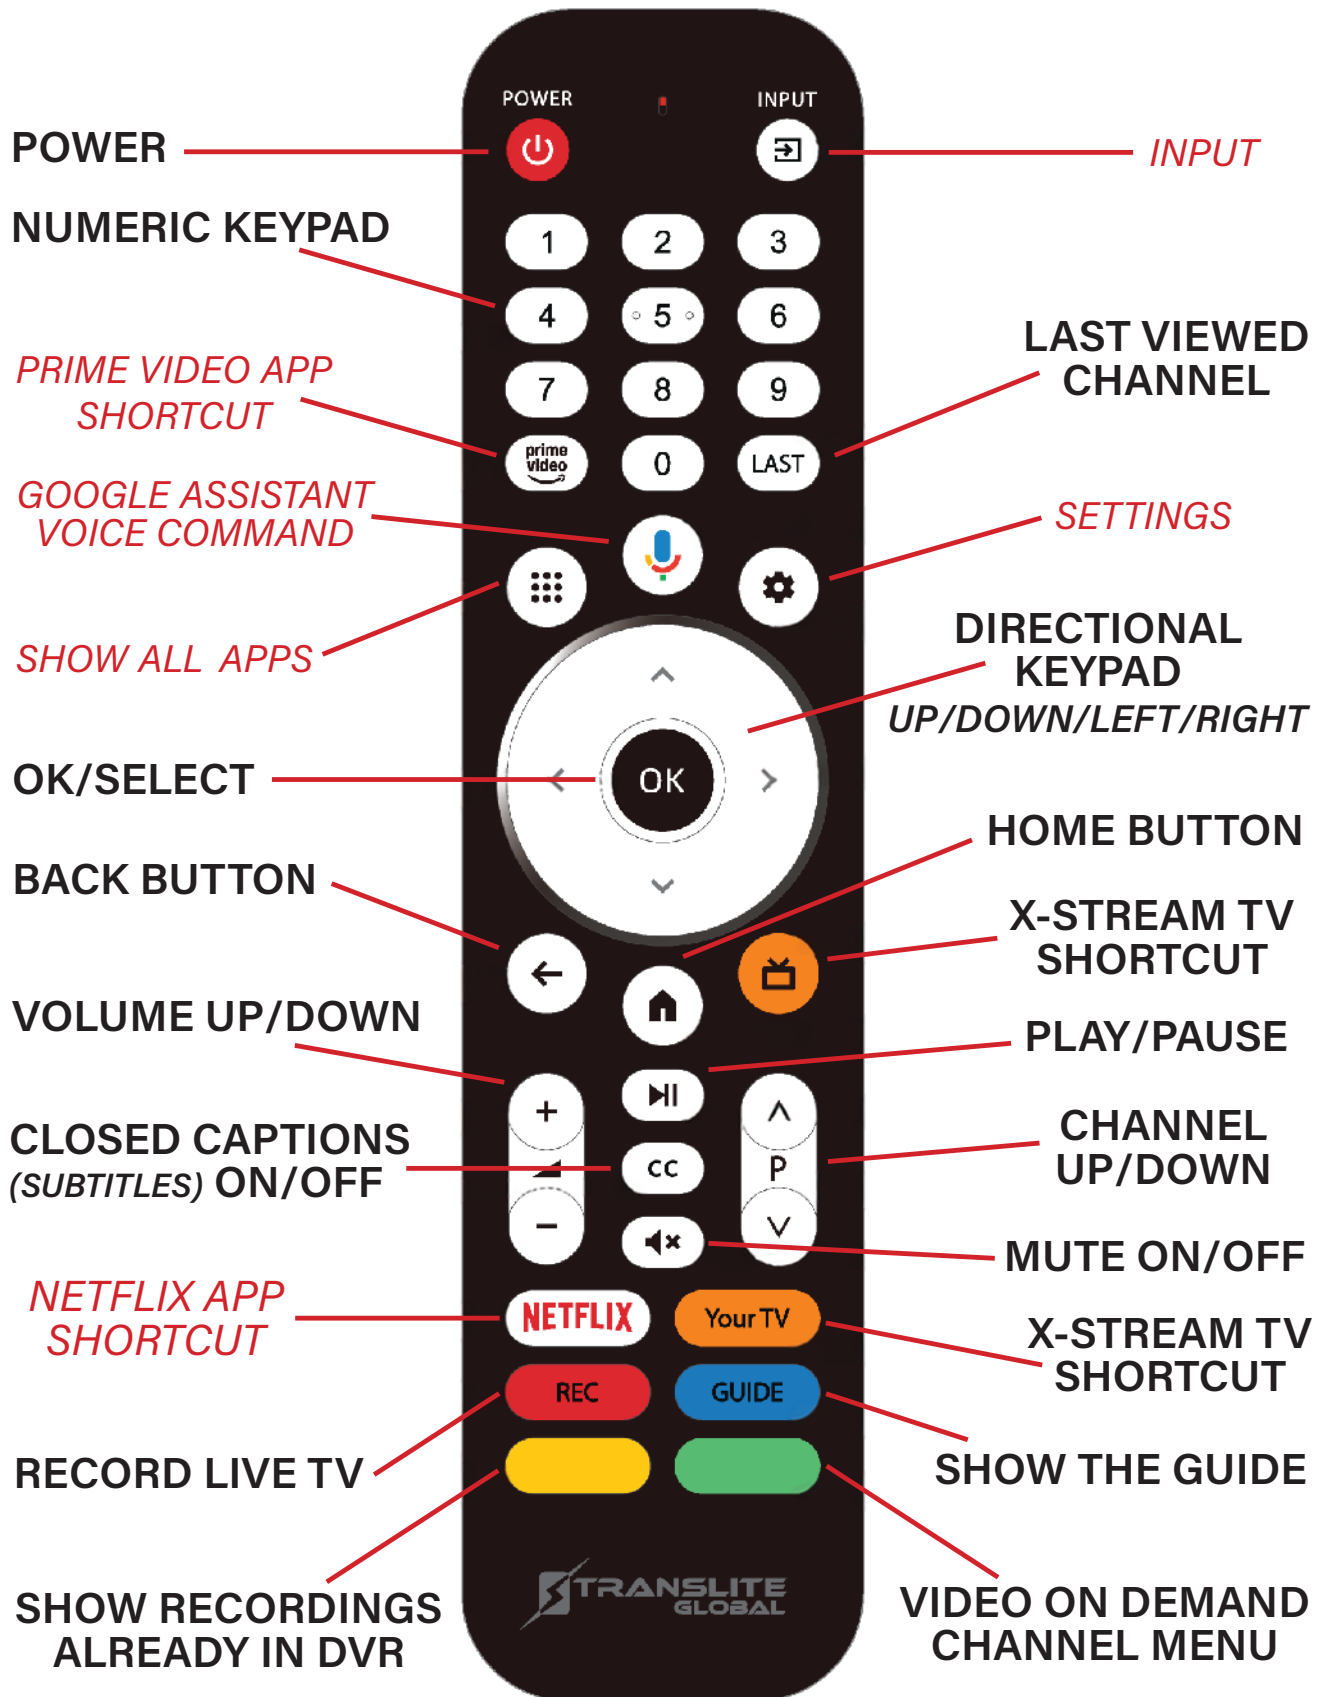

Buttons listed in red are those not likely to be utilized as much with the Williamstown X-Stream TV App.

If you utilize a Firestick, Roku Stick, Apple Device or the smart feature on your television to access internet-based apps...your starting screen may look something similar to this when you first turn it on.

Use your device's remote, navigate to and select the Williamstown X-Stream TV App. *(Depending on your device, it may or may not include the wording. Some devices just show the logo, as pictured here.)*




If you do not see the Williamstown X-Stream TV App (or its logo), look for and select the Your TV Green App on your smart TV.



If your TV has an Android box attached to it, you may see the box's home screen when you first turn it and the tv on. If the TV comes on, and you don't see anything with the Williamstown X-Stream TV app, look at the little black box connected to the TV. It should have a blue light on the front of it, to let you know it is powered on. If the light is red, please press the small button located on the top of the box - just once - to turn it on. It may take 20-seconds or so to come on. (Don't press it a second time as it boots up.)

Depending on how long the box has been off, it may take you directly to the App's Main Menu...and you may skip the step below, and proceed to the next page.

Android Box Home Screen

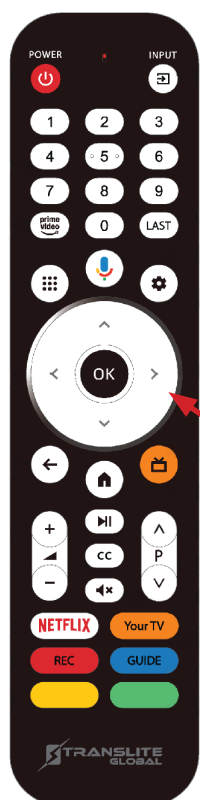


You should see a blue, highlighted box surrounding the Williamstown X-Stream TV App logo on the bottom. *(If not, use the directional keypad to move the cursor up, down, left or right, until box is around app logo.)*

Then press the OK button.

You should now see the Williamstown X-Stream TV App Main Menu

The Williamstown X-Stream TV App Main Menu will be listed down the left-hand side of the screen.

(Don't worry about the programs being displayed on the right-hand side, as they will change over time with your viewing habits.)

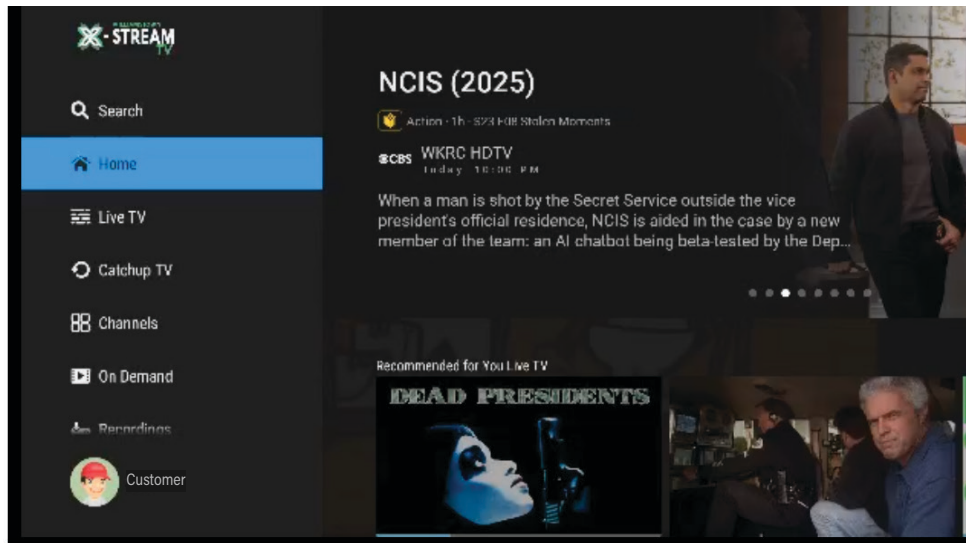

You will see the following options among those listed down the left-hand side of the screen...

HOME - Here the app may recommend shows for you to watch, based upon your viewing habits.
This list may change as time goes by.

LIVE TV - Choose this to watch TV. This will take you to the Channel Guide, which allows you to see what is currently playing (as well as what's played in the past, and scheduled in the future.)

CATCHUP TV - Certain programming that has already aired, but still available for you to watch, even if you did not record it.


CHANNELS - Groups of channels, sorted by programming type (ie: News & Weather, Kids Channels, Sports, Culture & Lifestyle, etc.)

ON DEMAND - Watch available movies and shows at any time.

Additional options are listed in the menu section, but you'll need to scroll down (using the Directional Keypad) to see them.

RECORDINGS - This is the collection of shows you have already recorded. *(To see how to record programs, go to the next page.)*


SETTINGS - This will allow you to see/change Device Settings as well as Network Settings. This is where you can sign-in to your wifi network.

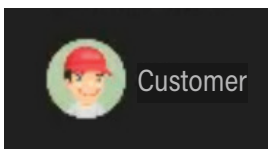

Selecting the little cartoon-like character at the bottom of the screen can show you, among other things, the ability to log out of your account.

TO NAVIGATE TO ANY OF THE OPTIONS, USE THE DIRECTIONAL KEYPAD ON YOUR REMOTE (TO MOVE THE BLUE HIGHLIGHTED BOX), AND THEN PRESS ENTER/SELECT/OK.

To Record A Program Using the Williamstown X-Stream TV App

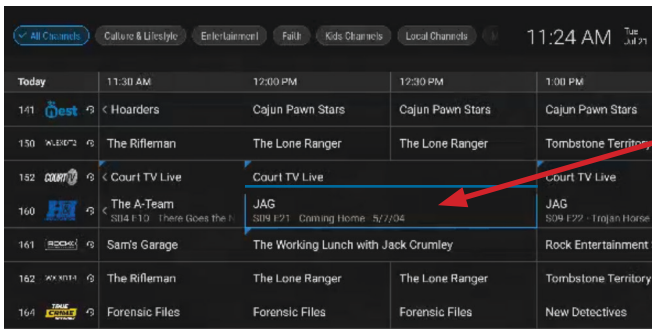


Open the guide and move to the show that will be on in the future that you wish to record.
(The blue box should be around that program.)


****IF you have an Android box, you may simply press the red REC button on your remote, to have that program recorded.****



****IF you do NOT have an Android box, simply click on that program (using your remote's Enter/Select/OK button). This will expand your selected program, to give you a description of that particular episode.**


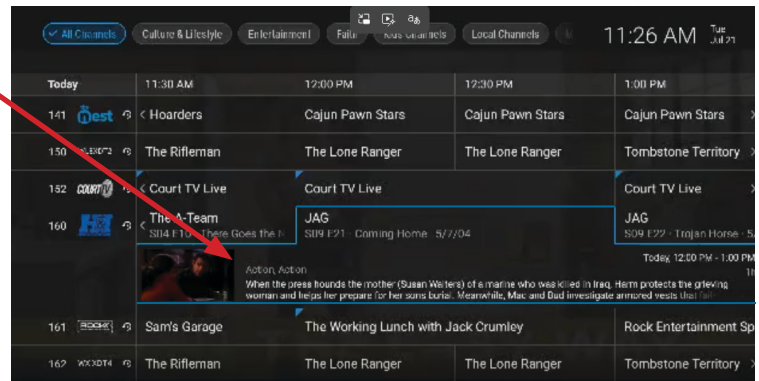


Pressing your remote's Enter/Select/OK button a second time, will bring up a full-screen description of that episode. On that screen, you will see the RECORD tab already highlighted in blue.

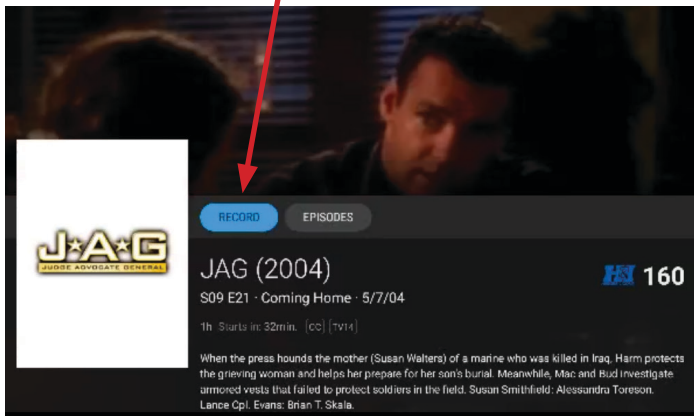

Pressing your remote's Enter/Select/OK button yet again, will bring up a menu with various record options. Choose single episodes, whole series, those that are just on a specific channel, or whether or not you want it to record just new episodes or include reruns. Use your Directional Keypad to move the blue highlighted box, then Enter/Select/OK to choose your desired options.

Once a program has been scheduled to be recorded, you will notice a small, circular icon show up next to the program title.

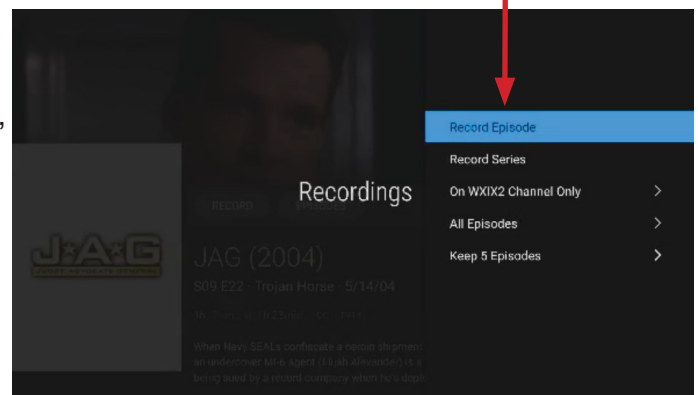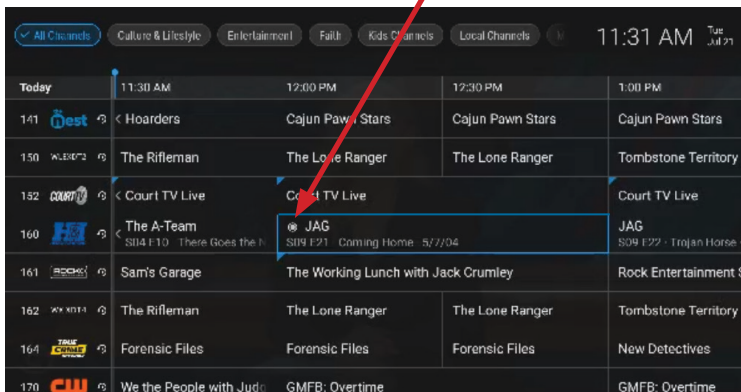


Each Williamstown X-Stream TV customer has a minimum of 50-hours recording time.

If you ever feel you've gotten into the wrong portion of the App...you can always BACK out of it!




No matter what remote you are using, there will be a "BACK" button. It will be a single arrow, pointing to the left.

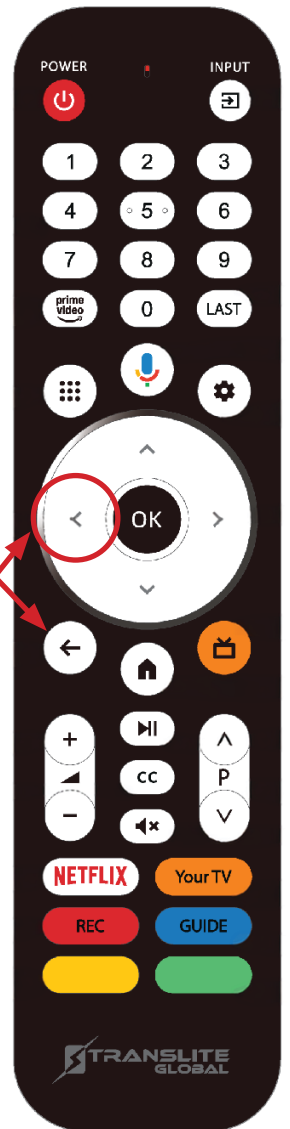

****PLEASE NOTE**** This is a different button than the left navigational button on your remote.
THEY ARE NOT THE SAME!


You may press the BACK button as many times as you need, to return you to the screen you desire. Ultimately, you can back all the way out to the Main Menu, if you like.

Logging in to your Williamstown X-Stream TV account...

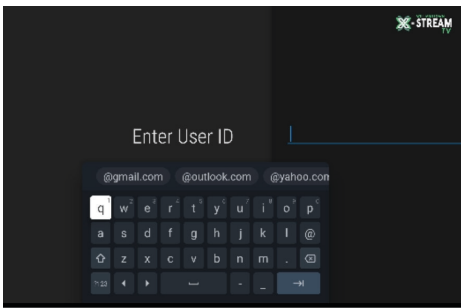


When entering your User ID, it is important to enter it in **ALL CAPITAL LETTERS!**

It will not work if any letters are lowercase.

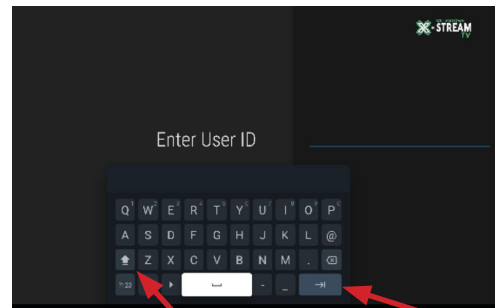


On the App's keyboard, the Shift key has been replaced by an upward facing arrow. If the arrow is "hollow", then you will get lowercase letters. Clicking on the the arrow will turn it "solid", and you will get an uppercase letter for only the next letter you choose. However, clicking on it again should produce a "solid" arrow that is underscored. This is the equivalent to a Caps-Lock, and will result in all capital letters, regardless of the quantity. When you are finished typing in the User ID, click on the button in the lower-right of the keyboard to take you to the next screen.

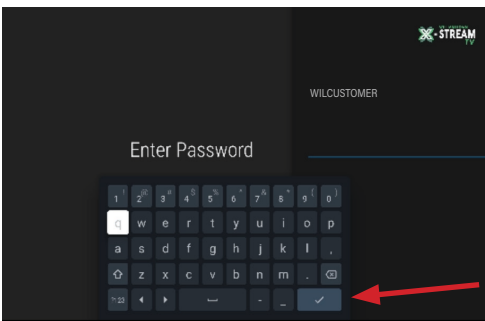

The next screen will ask for your password. Simply type it in by selecting the appropriate keys while using the navigational and Enter/Select/OK buttons on your remote.

When done, select the Check Mark button in the lower-right of the keyboard.

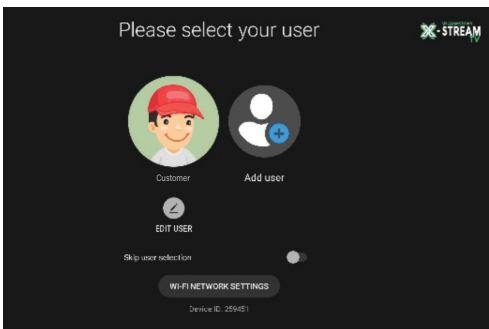


The App will now ask you to select your user. It will automatically default to you, so you can just click on the Enter/Select/OK button to advance to the next screens.

Your Williamstown X-Stream TV

User ID:

Password:

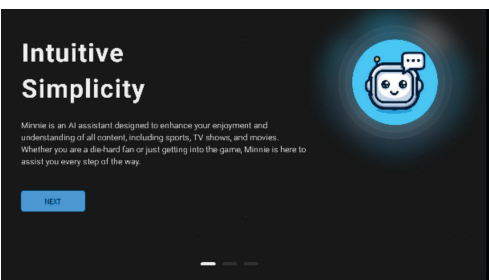

The final three screens just involve some settings for the app. You can just select "Next", by using the Enter/Select/OK button on your remote.

