


Example ONLY of raised framing for R38 insulation use. Raised heel trusses can also be used.

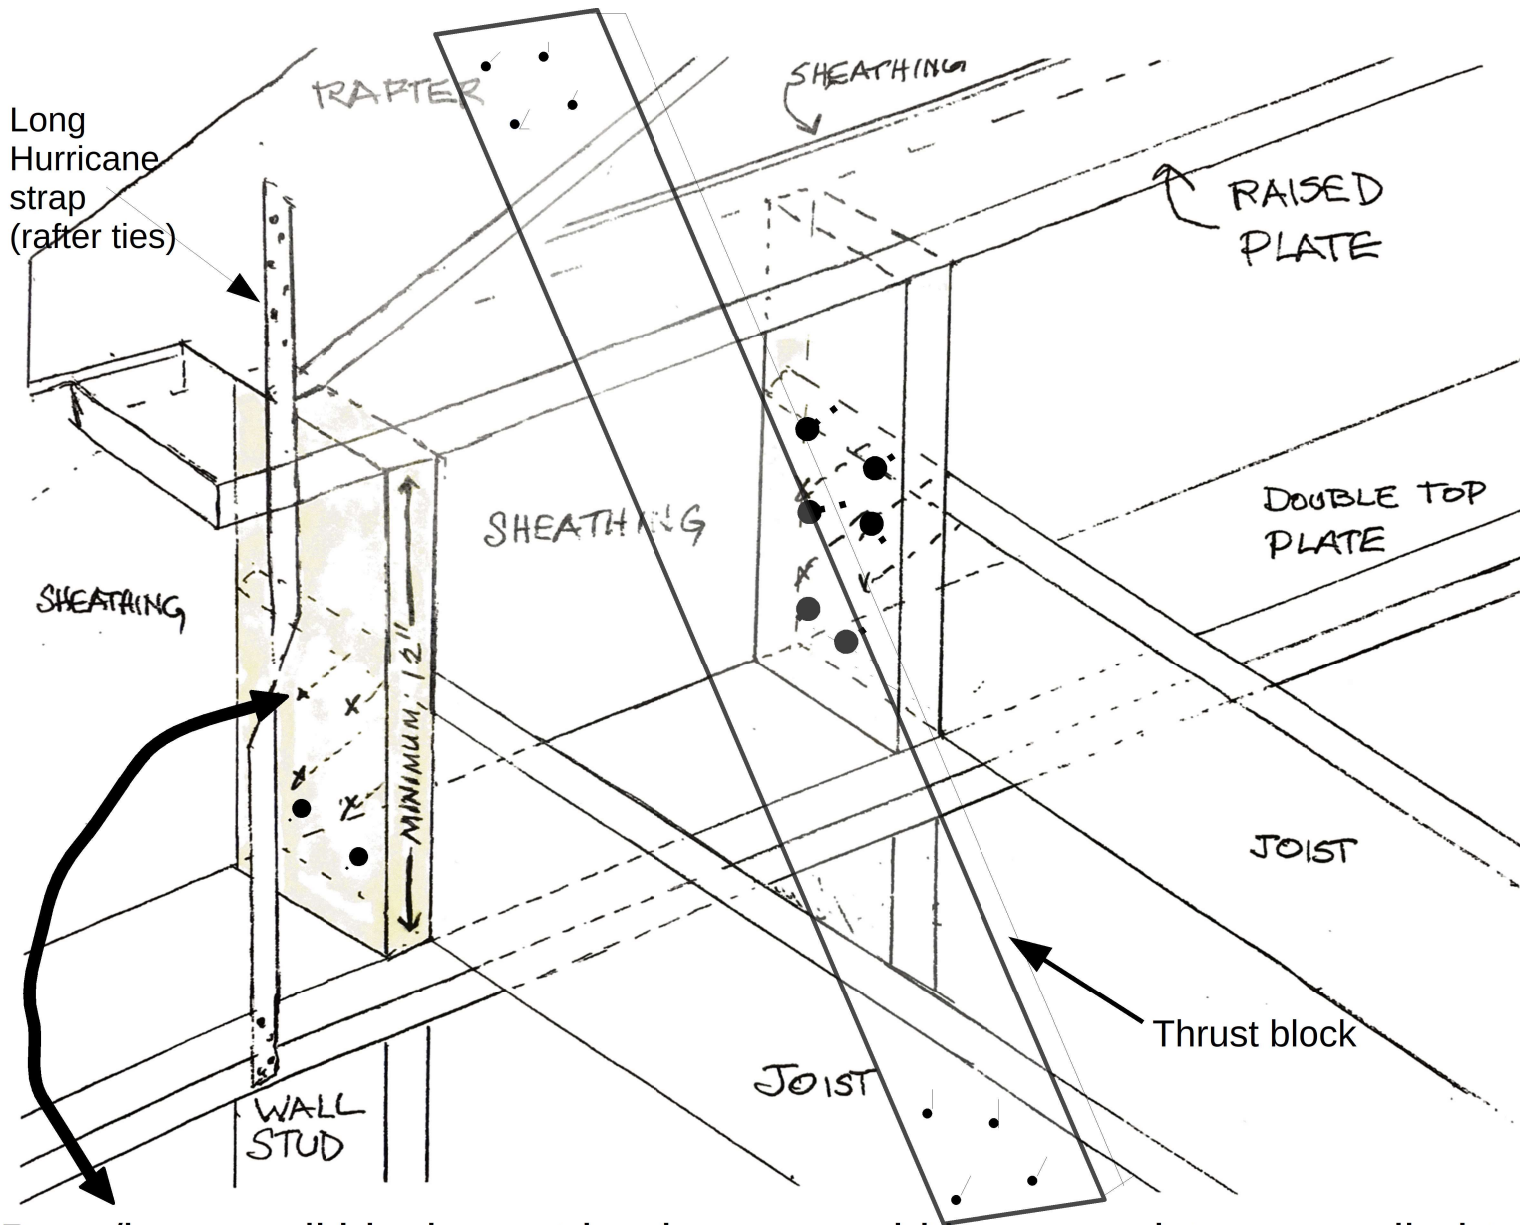

Pony/knee-wall block must be the same width as top plate, toe-nailed to top plate w/ two (2) nails and nailed **thru the block** to the ceiling joist w/ four (4) more patterned nails. Exterior sheathing must not 'break' at the double top plate. Rafter ties must be installed on interior.